
# **Time of Sale**

## Extended Protection

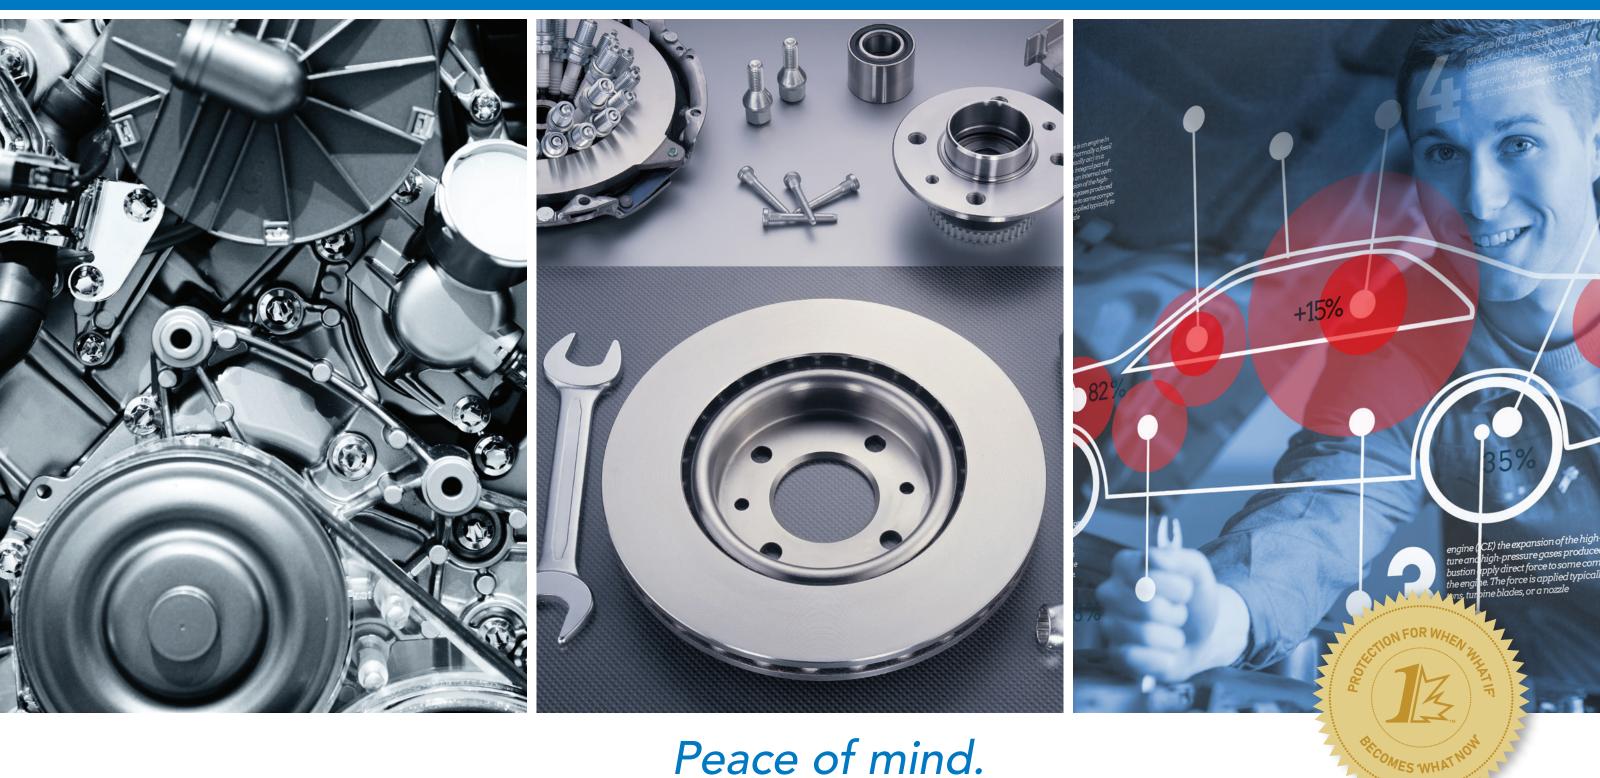



## **Canada & United States Coverage**

FCPP covers your vehicle anywhere in Canada and the continental United States.

### **Direct Response**

FCPP will quickly and efficiently handle your claim. Repair costs are paid directly to the repair facility on authorized services, saving you from out-of-pocket expenses and the inconvenience of waiting for reimbursement.

### **Transferable Coverage**

In the event you choose to sell your vehicle, you can apply to transfer the coverage to the next owner for the remainder of Policy/ Contract term.

### **Deductible**

Plans have a choice of \$100 or \$200 deductible per repair visit, plus applicable taxes, on all covered repairs. In the event the same component fails again, no deductible will be charged for its repair or replacement.

## **Reducing Deductible**

The selected deductible will be reduced by \$50 when repairs are performed at your selling dealer.



## **Travel with a First Canadian Protection Plan.**

Are you worried about unexpected breakdowns and unforeseen costly repairs? With the cost of service and components increasing each year, an expensive repair can be a major financial burden. Leave your worries behind with FCPP.

- FCPP will quickly and efficiently handle your claim. **Repair** costs are paid directly to the repair facility on authorized services, saving you from out-of-pocket expenses and the inconvenience of waiting for reimbursement.
- Choose a protection plan that guards against these unplanned expenses.

## It's better to have protection and NOT NEED it, than to NEED it and NOT HAVE ANY.





#### Ulti

| 1  | En  |
|----|-----|
| 2  | Tu  |
| 3  | Tra |
| 4  | Dr  |
| 5  | Tra |
| 6  | Fro |
| 7  | Bra |
| 8  | Ele |
| 9  | Air |
| 10 | Fu  |
| 11 | Fro |
| 12 | He  |
| 13 | En  |
| 14 | Ult |
|    |     |

## **Select the right** plan for You.

| mate & Ultimate Wrap —        | <br> |  |
|-------------------------------|------|--|
| Select Plus —<br>Powertrain — |      |  |
| gine                          |      |  |
| rbocharger/Supercharger       |      |  |
| ansmission                    |      |  |
| ive Axle                      |      |  |
| ansfer Case                   |      |  |
| ont Wheel Steering            |      |  |
| akes                          |      |  |
| ectrical                      |      |  |
| Conditioner                   |      |  |
| el System                     |      |  |
| ont & Rear Suspension         |      |  |
| eating/Cooling System         |      |  |
| nission Coverage*             |      |  |
| timate Parts Groups**         |      |  |
|                               |      |  |

\*Kilometre limits apply. \*\* See contract/policy for a full list of parts not covered.



## Schedule of Coverage

Includes parts and labour for the following components:

Ultimate & Ultimate Wrap -

| Ultimate & Ultimate Wrap —                     |     |   |  |
|--|-----|---|--|
| Select Plus •                                  |     |   |  |
| Powertrain •                                   |     |   |  |
|  |     |   |  |
|  |     |   |  |
| ENGINE   |     |   |  |
|  |     |   |  |
| Cylinder block & all internal lubricated parts |     |   |  |
| contained within the engine                    |     |   |  |
| Cylinder Heads                                 |     |   |  |
| Pistons & Piston Rings                         |     |   |  |
| Connecting Rods & Bearings                     |     |   |  |
| Crankshaft & Crankshaft Main Bearings          |     |   |  |
| OHC Carriers                                   |     |   |  |
| Cover & Module                                 |     |   |  |
| Camshaft & Camshaft Bearings                   |     |   |  |
| Cam Followers                                  |     |   |  |
| Timing Chain/Belt (unless timing belt was      |     |   |  |
| not replaced when recommended by the           |     |   |  |
| manufacturer)                                  |     |   |  |
| Timing Gears                                   |     |   |  |
| Timing Chain Cover                             |     |   |  |
| Timing Chain Tensioners                        |     |   |  |
| Timing Chain & Belt Guides                     |     |   |  |
| Timing Belt Pulley                             |     |   |  |
| Engine Serpentine Belt Tensioner               |     |   |  |
| Idler Pulley & Idler Pulley Bearings           |     |   |  |
| Flywheel (excluding teeth)                     |     |   |  |
| Rocker Arms & Rocker Shafts                    |     |   |  |
| Rocker Bearings                                |     |   |  |
| Cylinder Head Valves                           |     |   |  |
| Valve Seals & Valve Seats                      |     |   |  |
| Valve Lifters & Valve Springs                  |     |   |  |
| Valve Retainers                                |     | Ŏ |  |
| Push Rods                                      |     |   |  |
| Water Pump                                     |     |   |  |
| Oil Pump & Oil Pump Housing                    |     |   |  |
| Harmonic Balancer                              |     |   |  |
| Oil Pan (excluding drain plug threads)         |     |   |  |
| Intake Manifold                                |     |   |  |
| Exhaust Manifold (excluding manifold & con-    |     | _ |  |
| vertor assembly)                               |     |   |  |
| Valve Covers                                   |     |   |  |
| Engine Mounts                                  |     |   |  |
| Diesel Fuel Injection Pump                     |     |   |  |
| Diesel Vacuum Pump                             |     |   |  |
| Seals & Gaskets                                |     |   |  |
|  | . 1 |   |  |

## Select Plus -Powertrain -**TURBOCHARGER / SUPERCHARGER**

| Turbocharger/Supercharger<br>Housing & all internal parts |  |  |
|---|--|--|
| Blowout Valves  |  |  |
| Intercooler   |  |  |
| Seals & Gaskets   |  |  |

## TRANSMISSION

(Automatic and Standard)

| Transmission case (if damaged from within)<br>& all internal parts |   |   |  |
|--|---|---|--|
| Input Shaft  |   |   |  |
| Master Clutch Cylinder   | Ŏ | Ŏ |  |
| Torque Converter   |   |   |  |
| Vacuum Modulator   |   |   |  |
| Transmission Mounts  |   |   |  |
| Oil Pan  |   |   |  |
| Seals & Gaskets  |   |   |  |

## **TRANSFER CASE**

| Transfer Case (if damaged from within) & all internal parts |  |  |
|---|--|--|
| Encoder Motor   |  |  |
| Seals & Gaskets   |  |  |

## **DRIVE AXLE**

(Front and Rear)

| Final Drive Housing  |  |  |
|--|--|--|
| Drive Axle Case (if damaged from within) & all internally lubricated parts.  |  |  |
| Differential Cover   |  |  |
| Axle Shaft   |  |  |
| Drive Shaft Universal Joint  |  |  |
| Wheel Bearings   |  |  |
| Hub Bearing Assembly (unless failure is caused by anti-lock breaking system) |  |  |
|  |  |  |



Tapered Locking I Drive Sha CV (Cons Drive Line CV Boots

Seals & C for ball joints.

Steering Rack & P Power St Power St Steering Pitman A Idler Arm Center L Upper St Relays Sensors Seals & C



Master C Vacuum Hydro As Disc Brak Wheel C Compens Metal Bra Combina Seals & C

### Ultimate & Ultimate Wrap -Select Plus -Powertrain -

## **DRIVE AXLE** (cont.)

|   | Rea | r) |
|---|-----|----|
| 4 | ncu | '' |

| Wheel Bearings         |  |  |
|------------------------|--|--|
| Hubs                   |  |  |
| aft                    |  |  |
| stant Velocity) Joints |  |  |
| ne Actuators           |  |  |
| S                      |  |  |
| Gaskets                |  |  |
|                        |  |  |

If a Lift Kit has been installed, coverage will not be provided

## **FRONT WHEEL STEERING**

| Box & all internal parts |  |  |
|--------------------------|--|--|
| Pinion Gear              |  |  |
| teering Pump             |  |  |
| teering Hoses            |  |  |
| y Spindles               |  |  |
| Arm                      |  |  |
| n                        |  |  |
| _ink                     |  |  |
| teering Column Shaft     |  |  |
|                          |  |  |
|                          |  |  |
| Gaskets                  |  |  |
|                          |  |  |

| Cylinder             |  |  |
|----------------------|--|--|
| Assist Booster       |  |  |
| ssist Booster        |  |  |
| ke Caliper           |  |  |
| Cylinders            |  |  |
| nsating Valve        |  |  |
| rake Hydraulic Lines |  |  |
| ation Valve          |  |  |
| Gaskets              |  |  |
|                      |  |  |

## Schedule of Coverage

Includes parts and labour for the following components:

Ultimate & Ultimate Wrap -

| Ultimate & Ultimate Wrap •<br>Select Plus •<br>Powertrain • |   |          |
|---|---|----------|
| ruwertraini •   | ] |          |
| ELECTRICAL  |   | ſ        |
| Alternator  |   |          |
| Digital Instrument Cluster                                  |   |          |
| Instrument Panel Printed Circuit Board                      |   |          |
| Voltage Regulator   |   |          |
| Starter Motor   |   |          |
| Starter Solenoid  |   |          |
| Starter Drive   |   |          |
| Factory Engine Compartment                                  |   |          |
| Wiring Harness  |   | ·        |
| Electronic Ignition Module                                  |   |          |
| Distributor Pick-up Coil                                    |   |          |
| Ignition Switch   |   |          |
| Ignition Lock Cylinder                                      |   |          |
| Ignition Coils  |   |          |
| Front & Rear Wiper Motor                                    |   |          |
| Washer Pump & Switch  |   |          |
| Manually Operated Electrical Switches                       |   |          |
| Body Computer & Control Module                              |   |          |
| Powertrain Control Module                                   |   |          |
| Stop Lamp Switch  |   |          |
| Headlamp Switch & Motor                                     |   |          |
| Turn Signal Switch  |   |          |
| Heater & Air Conditioning Control Assembly                  |   |          |
| Blower Motor Resistor                                       |   |          |
| Horns   |   |          |
| Factory Installed Cruise Control Module                     |   |          |
| Cruise Control Transducer                                   |   |          |
| Cruise Control Servo & Amplifier                            |   |          |
| Cruise Control Engagement Switch                            |   |          |
| Power Vent Window Motors                                    |   |          |
| Power Window Motor (excluding regulators)                   |   |          |
| Power Window Switch   |   | י        |
| Serviceable Power Seat Motors (excluding                    |   |          |
| frame/base assembly)  |   |          |
| Power Seat Switch   |   |          |
| Power Mirror Motor (excluding assemblies)                   |   |          |
| Power Mirror Motor Switch                                   |   | <u>'</u> |
| Power Antenna Motor (excluding mast)                        |   |          |

| Select Plus<br>Powertrain<br>ELECTRICAL (cont.)       |  |  |
|---|--|--|
| Convertible Top Motor                                 |  |  |
| Serviceable Sun Roof Motor (excluding frame assembly) |  |  |

| frame assembly)                              |  |  |
|--|--|--|
| Rear Defogger Switch                         |  |  |
| Rear Window Defroster Grid (excluding glass) |  |  |
| Power Door Lock Actuator & Switch            |  |  |
|  |  |  |

## **AIR CONDITIONER**

| Condenser                          |  |  |
|------------------------------------|--|--|
| Compressor                         |  |  |
| Clutch Assembly & Pulley           |  |  |
| A/C Lines & Hoses                  |  |  |
| Evaporator                         |  |  |
| High/Low Compressor Cut-off Switch |  |  |
| Expansion Valve                    |  |  |
| Pressure Cycling Switch            |  |  |
| Orifice Tube                       |  |  |
| Seals & Gaskets                    |  |  |
|                                    |  |  |

## **FUEL SYSTEM**

| Fuel Pump                         |  |  |
|-----------------------------------|--|--|
| Diesel Fuel Injectors/Nozzles     |  |  |
| Fuel Tank                         |  |  |
| Mechanical Fuel Tank Sending Unit |  |  |
| Fuel Rail                         |  |  |
| Fuel Pressure Regulator           |  |  |
| Metal Fuel Delivery Lines         |  |  |
| Fuel Tank Selector Valve          |  |  |

## **FRONT & REAR SUSPENSION**

| Upper & Lower Control Arms                    |  |  |
|---|--|--|
| Control Arm Shafts/Bushings                   |  |  |
| Upper & Lower Ball Joints                     |  |  |
| Torsion Bars & Mounts/Bushings                |  |  |
| Stabilizer Bar (excluding any electronic dis- |  |  |
| connect system)                               |  |  |
| Stabilizer Links & Bushings                   |  |  |
| King Pins                                     |  |  |
| Spindle & Spindle Support                     |  |  |
|   |  |  |



Heater C Front & F Engine C Hydraulic Radiator Hot Wate

Air Pump Cam Sha Canister Canister ister filter Knock Se Crank An EGR Sole EGR Valv Idle Spee Mass Air Manifold O2 (Oxyc PCM Cod Serviceat Vacuum I

#### Ultimate & Ultimate Wrap -Select Plus -

Powertrain —

## **HEATING & COOLING SYSTEM**

| Core                |  |  |
|---------------------|--|--|
| Rear Blower Motor   |  |  |
| Cooling Fan & Motor |  |  |
| c Fan Clutch Hub    |  |  |
|                     |  |  |
| er Valve            |  |  |

## **EMISSION SYSTEM**

| C  |      |  |
|--|------|--|
| aft Sensor                                       |      |  |
| Purge Solenoid                                   |      |  |
| Vent Solenoid (excluding the can-<br>r assembly) |      |  |
| ensor  |      |  |
| ngle Sensor                                      |      |  |
| enoid  |      |  |
| /e   |      |  |
| ed Control Motor                                 |      |  |
| Flow Sensor                                      |      |  |
| Pressure Sensor                                  |      |  |
| gen) Sensor                                      |      |  |
| olant Temperature Sensor                         |      |  |
| ble Throttle Position Sensor (TPS)               |      |  |
| Pump   |      |  |
|  | <br> |  |

## WHAT'S COVERED?

## **ELECTRIC VEHICLES**

Provides coverage for electric or hybrid vehicle batteries, battery packs, or an equivalent that powers an electric or hybrid vehicle. Maximum benefit up to \$10,000. Includes 1 repair or replacement of the vehicle's home charging unit up to a maximum of \$800. Does not cover battery capacity degradation. **Coverage available** under Ultimate & Ultimate Wrap plans only.

### **EMISSIONS**

Select Plus includes Emission System Coverage up to 100,000 km on the vehicle's odometer. Ultimate & Ultimate Wrap extends coverage to 140,000km.

## **SEALS & GASKETS**

Coverage for all seals and gaskets, that contain fluids or lubricants, listed for the coverage plan selected. For clarity, coverage is for excessive leakage. Included in all levels of coverage.

## **ULTIMATE PARTS GROUPS**

Ultimate & Ultimate Wrap Coverage Plans include all other mechanical system parts or components unless specially listed as not covered. See contract/policy for a full list of all parts not covered.

## Schedule of Coverage

## **ADDITIONAL BENEFITS**

INCLUDED IN ALL LEVELS OF COVERAGE

## **ROAD SERVICE & TOWING EXPENSE ASSISTANCE**

If your vehicle is unable to proceed safely under its own power, we will pay to tow the vehicle to the dealer (up to \$240) or to another destination (up to \$100). Additional services include mechanical first aid, tire service, battery service, fuel delivery service, and locksmith service. No deductible will apply.

## **RENTAL & TRIP INTERRUPTION**

#### **Rental** - In the event of a covered breakdown requiring overnight repairs, we will pay to reimburse you for receipted expenses to rent a replacement vehicle or reimburse you for taxi or public transportation expenses. Up to \$50 per day, maximum of \$250 per repair. No deductible will apply.

Trip Interruption - In the event a covered breakdown occurs more than 100km from your home and results in a repair facility keeping your vehicle overnight, we will reimburse receipted motel and restaurant expenses. Up to \$150 per day, maximum \$450 per repair. No deductible will apply.

## **Experienced Based Refund (EBR)**/ **Guaranteed Price Rebate (GPR)**

(Available on gualifying plans)

If the plan you select includes EBR/GPR, you can apply for a refund as soon as the contract/policy expires by time. Refunds are based on the amount you originally paid for the contract/policy, up to a maximum of \$2,000, less your deductible.

- the entire term.

Some restrictions apply - see contract/policy for details.



• Original contract/policy holder must still be registered owner.

• No mechanical or any other benefit claims were made during

• Refund must be requested and claim received within the allotted time frame.



Mechanical Breakdown Contracts Administrator / Obligor First Canadian Repair Protection 320 Sioux Road Sherwood Park, AB T8A 3X6



Mechanical Breakdown Policies Administrator / Underwriter Millennium Insurance Corporation 320 Sioux Road Sherwood Park, AB T8A 3X6

| Toll-Free PH: | 1.800.381.2580 |
|---------------|----------------|
| Local PH:     | 1.780.467.9575 |
| Toll-Free FX: | 1.800.304.4031 |
| Local FX:     | 1.780.467.9812 |

\*NOTICE: The contents provided in this brochure are only a summary of certain terms and conditions of the Policy/Contract. Please refer to the actual Policy/Contract for complete details of coverage and exclusions. Not all Policies/Contracts are available in all provinces, and specific provisions may vary based upon individual provincial requirements.