


# Off-Road Vehicles

## **Extended Protection**

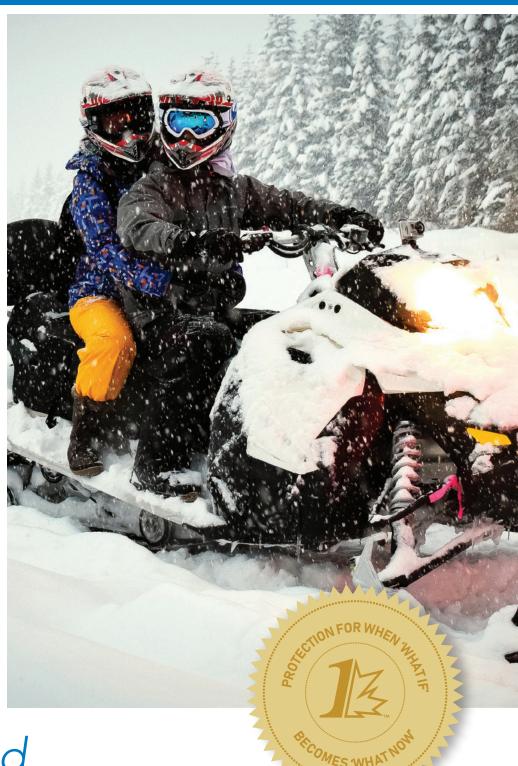





Off-road with peace of mind

#### **Canada & United States Coverage**

FCPP covers breakdowns occurring anywhere in Canada and the continental United States.

#### **Transferable Coverage**

In the event you choose to sell your off-road vehicle, you can apply to transfer the coverage to the next owner for the remainder of the contract/policy term.

#### **Reducing Deductible**

Your deductible will be reduced by \$50 when repairs are performed at your selling dealer.



### Off-Road with peace of mind.


## Off-Road with a First Canadian Protection Plan

Are you worried about unexpected breakdowns and unforeseen costly repairs? Off-road vehicles are built with many specialized parts, and with the cost of service and components increasing each year, , an expensive repair could ruin your planned adventures. **Leave your worries behind with FCPP.** 

FCPP will quickly and efficiently handle your claim. Repair costs are paid directly to the repair facility on authorized service, saving you from out-of-pocket expenses and the inconvenience of waiting for reimbursement.

You're buying a great off-road vehicle, so why do you need this protection?

# It's better to have protection and NOT NEED it, than to NEED it and NOT HAVE ANY.

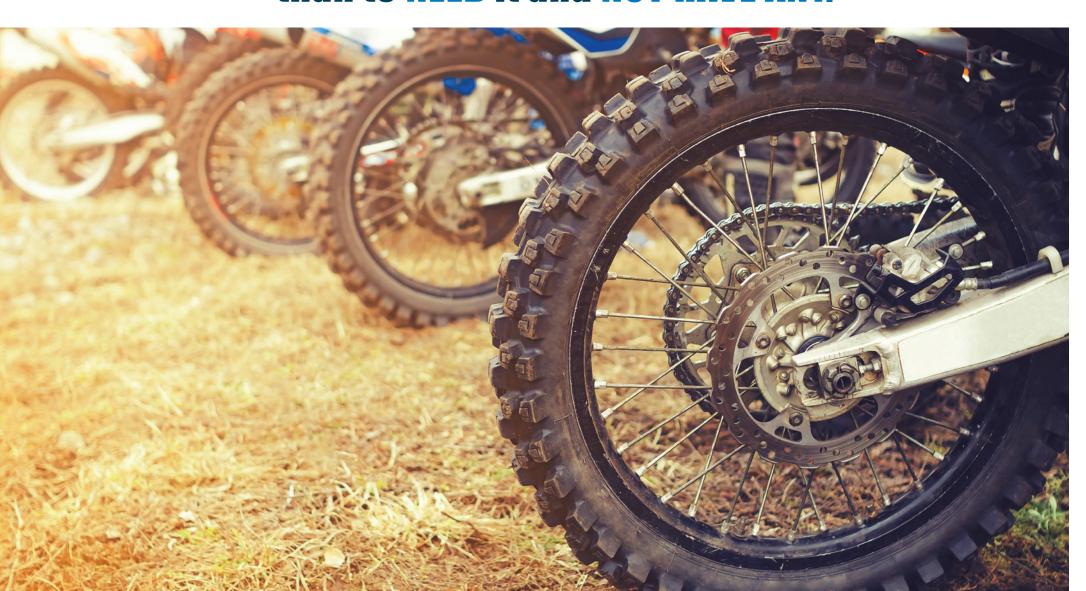

# FCPP has created the Ultimate plan for you.

$\checkmark$	Engine
<b>√</b>	Turbocharger / Supercharger
<b>√</b>	Transmission
<b>√</b>	Primary Drive Components
<b>√</b>	Secondary Drive Components
<b>√</b>	Track Drive
<b>√</b>	Drive Axle
<b>✓</b>	Chain Case Components
<b>√</b>	Oil Injection Components
<b>√</b>	Cooling System
<b>√</b>	Seals & Gaskets
<b>√</b>	Steering
<b>√</b>	Brakes
<b>√</b>	Fuel System
<b>√</b>	Electrical
<b>√</b>	Front & Rear Suspension
$\checkmark$	Frame



TOLL FREE 1.800.381.2580

## Schedule of Coverage

Includes parts and labour for the following components:

#### **ENGINE**

All internal lubricated parts within the engine, including:

<b>V</b>	Pistons
<b>V</b>	Piston Rings
<b>V</b>	Pins
<b>V</b>	Piston Pin Lock Rings
<b>V</b>	Connecting Rods & Bearings Crankshaft
<b>v</b>	Crankshaft Main Bearings
<b>▼</b>	Camshaft
<b>V</b>	Camshaft Bearings
<b>√</b>	Cam Followers
<b>√</b>	Timing Chain (Timing Belt only covered if connected to a breakdown involving a covered part)
<b>V</b>	Timing Gear
<b>V</b>	Timing Chain Cover
<b>V</b>	Timing Guides & Tensioner
<b>√</b>	Rocker Bushings
<b>V</b>	Rocker Arm Pivots
<b>√</b>	Shims
<b>√</b>	Sleeves
<b>/</b>	Spacers
	Sprocket Shaft Bearing
	Tappets & Guides
	Thrust Washers
	Timing Hole Plug
<b>/</b>	Headgasket
<b>✓</b>	Valve Guides
<b>√</b>	Valve Lifters
	Valve Springs
<b>\</b>	Valve Retainers
<b>/</b>	Valve Seats
<b>√</b>	Valve Seals
<b>√</b>	Valve Covers
<b>√</b>	Push Rods
<b>✓</b>	Oil Pump & Housing
<b>/</b>	Oil Pan (excluding drain plug threads)
<b>/</b>	Oil Filter Mount
<b>√</b>	Oil Pressure Switch
<b>1</b>	Oil Pump
_	

#### **ENGINE (Cont.)**

<b>V</b>	Oil Pump Drive Shaft
<b>√</b>	Oil Pump Idler Gear
<b>√</b>	Oil Pump Pressure Relief Valve
<b>√</b>	Oil Screen Cover(s)
<b>√</b>	Base Gasket
<b>√</b>	Breather Valve Gear
<b>√</b>	Caps
<b>√</b>	Check Balls
<b>1</b>	Crank Pin
<b>√</b>	Crank Pin Bearing
<b>√</b>	Crankshaft Key
<b>√</b>	Expansion Plug
<b>√</b>	Intake & Exhaust Manifolds
<b>√</b>	Exhaust Valve
<b>√</b>	Intake Valve
<b>√</b>	Intake Manifold
<b>√</b>	Gaskets
<b>√</b>	Needle Bearings
<b>√</b>	Engine Mounts/Isolators
<b>√</b>	FlyWheel/Flexplate (excluding teeth)
<b>√</b>	Reed Valve & Block
<b>√</b>	Power Valve
<b>√</b>	Rotary Valve & Shaft
_	

#### TURBOCHARGER/SUPERCHARGER

(Factory Installed) Turbocharger/Supercharger housing (when damaged from within) and all internal lubricated parts including:

V	Turbo Vanes
<b>V</b>	Shaft
<b>V</b>	Bushings
<b>V</b>	Waste Gate

#### **TRANSMISSION**

<b>V</b>	Manual & Hydraulic Linkages
<b>√</b>	Transmission Housing (when damaged from within) and all internally lubricated parts
V	Bearings
V	Bushings
<b>V</b>	Countershaft

#### **TRANSMISSION (Cont.)**

/	
V	Coupling
<b>V</b>	Filler Cap
<b>V</b>	Filler Plug O-Ring
<b>1</b>	Gears
<b>V</b>	Inner Ramp
<b>1</b>	Mainshaft
	Oil Pan & Gasket
	Oil Spout Gasket
<b>V</b>	Oil Tank Seal Outer Ramp
	Pins & Plugs
	Quad Seal
	Ramp Balls
<b>V</b>	Retaining Ring
<b>V</b>	Spacers
	Thrust Washers
	Transmission Oil Cooler (factory installed only)
	Internal Selector Mechanism
	Switches
<b>V</b>	Sensors
<b>V</b>	Servos
	Actuators
<b>V</b>	Module

#### PRIMARY DRIVE COMPONENTS

Housing (when damaged from within) and all internal lubricated parts including:

/	
<b>V</b>	Chain Tensioner
<b>V</b>	Chain Tensioner Anchor Plate
<b>V</b>	Chain Tensioner Pad
<b>V</b>	Chain Tensioner Plate
<b>V</b>	Front Sprocket
$\checkmark$	Grommets
<b>V</b>	Primary Chain
<b>V</b>	Shaft Extension
<b>V</b>	Sliding Cam
<b>V</b>	Spacers
<b>V</b>	Sprocket Cover
<b>\</b>	Sheaves
<b>V</b>	Gears
<b>V</b>	Bearings
<b>V</b>	Bushing

## Schedule of Coverage

Includes parts and labour for the following components:

#### **SECONDARY DRIVE COMPONENTS**

<b>V</b>	Stationary & Moveable Sheaves
<b>V</b>	Secondary Shaft & Bearings
V	Bushings
<b>V</b>	Cam Assembly

#### TRACK DRIVE

<b>V</b>	Tracks (non-studded only)
	·
V	Drive Shaft & Axle
<b>\</b>	Drive Sprockets
<b>V</b>	Bearings
V	Bushings
V	Collars
V	Track Guide Wheels
<b>V</b>	Slide Rails

#### **DRIVE AXLE**

<b>1</b>	Differential
	Transaxle & Final Drive Housings (when damage from
<b>V</b> /	within) & all internal lubricated parts
V	Drive Shafts & Yokes
<b>\</b>	Universal Joints
<b>V</b>	Constant Velocity Joints
<b>\</b>	Axle Hub Bearings
<b>V</b>	Bearing Spacer Sleeves
<b>V</b>	Axle Shafts
<b>V</b>	Differential Covers
V	Supports & Retainers
V	Lock Rings
<b>1</b>	Crown & Pinion Gears

#### **CHAIN CASE COMPONENTS**

Housing (when damaged from within) and all internally lubricated parts including:

	/	
	<b>V</b>	Shafts
	<b>V</b>	Gears
ſ	<b>V</b>	Sprockets
	<b>V</b>	Chain & Adjuster Mechanism
	$\checkmark$	Reverse Gear Components

#### **OIL INJECTION COMPONENTS**

V	Oil Injection Drive Gear
<b>V</b>	Oil Tank
V	Oil Level Sensor
<b>V</b>	Oil Lines
<b>V</b>	Oil Injection Metering System
<b>V</b>	Oil Pump

#### **COOLING SYSTEM**

V	Engine Cooling Fan Motor
V,	Water Pump
<b>V</b> ,	Radiator
<b>V</b>	Thermostat
V	Temperature Gauge
V	Sending Unit
V	Cooling Fan Sensor & Switch
V	Fan Relays
<b>V</b>	Thermostat Housing
<b>V</b>	Water Pump Housing

#### **SEALS AND GASKETS**

<b>✓</b>	Seals & Gaskets of any listed covered component.
	Seals & Gaskets of any listed covered component. (seepage is excluded)

#### **STEERING**

Steering stem, including the following:

<b>V</b>	Bearings
V	Bearing Adjuster
<b>V</b>	Damper Tubes
V	O-Rings
<b>V</b>	Oil Seals
<b>V</b>	Roller Bearing & Cup
<b>V</b>	Steering Stem Shaft
V	Axle
V	Handle Bar & Tie-Rod Ends
<b>V</b>	Steering Links
<b>V</b>	Steering Link Ends
<b>V</b>	Spindle Bushings

#### **BRAKES**

<b>V</b>	Master Cylinder
V	Master Cylinder Boot
<b>V</b>	Master Cylinder Cover
<b>V</b>	Master Cylinder Fittings
<b>V</b>	Master Cylinder Gaskets
<b>V</b>	Master Cylinder Reservoir
<b>V</b>	Master Cylinder Rod
<b>V</b>	Calipers
<b>V</b>	Metal Hydraulic Brake Lines & Fitting
<b>V</b>	Backing Plate
<b>V</b>	Brakes
<b>V</b>	Brake Rotors
<b>V</b>	Bleeders
<b>V</b> /	Brake Rod Return Spring
V	O-Rings
<b>V</b>	Pins
V	Spacers
<b>V</b>	Hinges & Levers
<b>V</b>	Springs

#### **ELECTRICAL**

ELE	CIKICAL
V	Alternator/Generator
<b>V</b>	Stator
V	Rectifier
V	Voltage Regulator
V	Starter Motor
<b>V</b>	Starter Solenoid
<b>V</b>	Starter Drive
V	Starter Armature
<b>V</b>	Starter Bearings & Brushes
V	Starter Bushings
<b>V</b>	Starter Field Windings
V	Stater Idle Gear
V	Starter Motor Case
V	Starter Pinion Gear
V	Starter Relay
V	Main Engine Wiring Harness
V	Distributor
<b>V</b>	Ignition Coil
	Electronic Ignition Module/CDI
V	Electronic Fuel Injection Control Module/Sensor Ignition Switch
<b>V</b>	Ignition Switch Lock Cylinder
<b>V</b>	Stop Lamp Switch
V	Head Lamp Switch
V	Turn Signal Switch
V	Start/Stop Switch

✓ Manually Operated Electrical Switches



## Schedule of Coverage

Includes parts and labour for the following components:

#### **ELECTRICAL (Cont.)**

V	Brake Light Relay
V	Brake Light Relay Switch
V	Coil Cover
<b>V</b>	Cruise Control Module
<b>\</b>	Cruise Control Servo
<b>\</b>	Cruise Control Switch
<b>V</b>	Dimmer Switch
<b>V</b>	Horn
<b>V</b>	Horn Contact Switch
	Neutral Indicator Switch
<b>V</b>	Neutral Safety Switch
<b>V</b>	Parking Lamps Relay
<b>V</b>	Parking Lamps Switch
<b>V</b>	Passing Lamp Switch
V	Speaker Control Switch
<b>V</b>	Turn Signal Canceller

#### **FUEL SYSTEM**

<b>V</b>	Fuel Pump
V	Fuel Injection Pump
<b>V</b>	Fuel Tank
<b>V</b>	Fuel Tank Sending Unit
<b>V</b>	Metal Fuel Lines & Fittings
<b>V</b>	Petcock
<b>V</b> /	Accelerator Pump
V	Carburetor Vacuum Switch
<b>V</b>	Carburetor Gasket
<b>V</b> /	Carburetor Linkage
V	Carburetor Rod & Spring
<b>V</b>	Carburetor Starter Valve
V	Control Cables
<b>V</b>	Fuel Injection Components
<b>V</b>	Needle Jets
<b>V</b>	Pressure Regulator
V	Fuel Door Lock Cylinder
<b>✓</b>	O-Rings

#### **FRONT & REAR SUSPENSION**

All internally lubricated parts of:

	, ,
V	Front Fork Tubes
<b>V</b>	Fork Stem & Nuts
<b>V</b>	Fork Stem Bracket
V	Fork Stem Dust Shield
V	Plugs
V	Slider Assemblies
V	Slider Tube
V	Springs
<b>V</b>	Stops
<b>V</b>	Bushings & Nuts
<b>V</b>	Swing Arm (including bearings & bushings)
V	Swing Arm Shaft
V	Control Arms
V	Ball Joints
<b>V</b>	Wheel Bearings
<b>V</b>	O-Rings
V	Roller Bearings
<b>V</b>	Snap Rings
V	Slider Tube Springs
<b>V</b>	Spacers

#### **FRAME**

<b>V</b>	Axle(s)
<b>V</b> /	Brackets
<b>V</b> /	Hubs
<b>V</b> /	Spring Hangers
V	Welds
<b>V</b>	Couplers
V	Suspension Springs
<b>✓</b>	Fenders

#### **OPTIONAL PACKAGE**

#### **TRAILER PACKAGE**

Master Cylinder
Hydraulic Brake Actuator
Backing Plates
Trailer Frame Welds
Spring Hanger Brackets and U-Bolts
Axles
Spindles & Wheel Bearings
Manual Winch

## EXPERIENCE BASED REFUND (EBR) / GUARANTEED PRICE REBATE (GPR)

(Available on qualifying plan terms)

If your plan includes EBR/GPR, you can apply for a refund as soon as the contract/policy expires by time. Refunds are based on the amount you originally paid for the contract/policy, up to a maximum of \$1,500, less your deductible.

- Original contract/policy holder must still be registered owner.
- No claims were made during the entire term.
- Refund must be requested and claim received within the allotted time frame.

Some restrictions apply - see contract/policy for details.



## Mechanical Breakdown Contracts Administrator / Obligor

First Canadian Repair Protection 320 Sioux Road Sherwood Park, AB T8A 3X6



#### Mechanical Breakdown Policies Administrator / Underwriter

Millennium Insurance Corporation 320 Sioux Road Sherwood Park, AB T8A 3X6

Toll-Free PH: 1.800.381.2580 Local PH: 1.780.467.9575 Toll-Free FX: 1.800.304.4031 Local FX: 1.780.467.9812

\*NOTICE: The contents provided in this brochure are only a summary of certain terms and conditions of the contract/policy. Please refer to the actual contract/policy for complete details of coverage and exclusions. Not all contract/policies are available in all provinces, and specific provisions may vary based upon individual provincial requirements.